

Remote Sounder

Part No. NC888D



Overview

- Can be connected to any multi-zone 800 Series Call Controller, Master Indicator Panel or Switchable Sounder to increase call indication
- Indicates Standard calls via a constant tone and Emergency calls via a pulsing tone.
- No more than two remote sounders should be connected to the hosting device.
- When connected to an NC887D Switchable Sounder, switching the NC887D off will also disable any remote sounders connected to it.



More Information

Technical Specifications

Quiescent current 0mA (none).

Alarm current $Determined \ by \ the \ type \ of \ control \ equipment \ and \ number \ / \ type \ of \ field \ devices \ connected \ to \ the \ system.$

Indicators

Controls None (the device is controlled by the host device it is connected to).

Connections -Ve (Negative); +Ve (Positive).

Onboard Sounder Yes. Sounds constantly for standard calls, intermittently for emergency calls.

Onboard Infrared Receiver

Product dimensions (mm) 87~W~x~87~H~x~23~D~mm. Mounts on a UK 25mm single gang back box.



T 01942 322744

E sales@c-tec.co.uk

W www.c-tec.com



















Construction & finish Plastic. IP Rating IP41. Weight 66g.

Operating conditions/temperature -5° C to $+40^{\circ}$ C. Max. relative humidity 95% non-condensing.

When connected to an NC887D Switchable Sounder, switching the NC887D off will also disable any Notes

NC888D remote sounders connected to it.





















